

GT86-RKBK

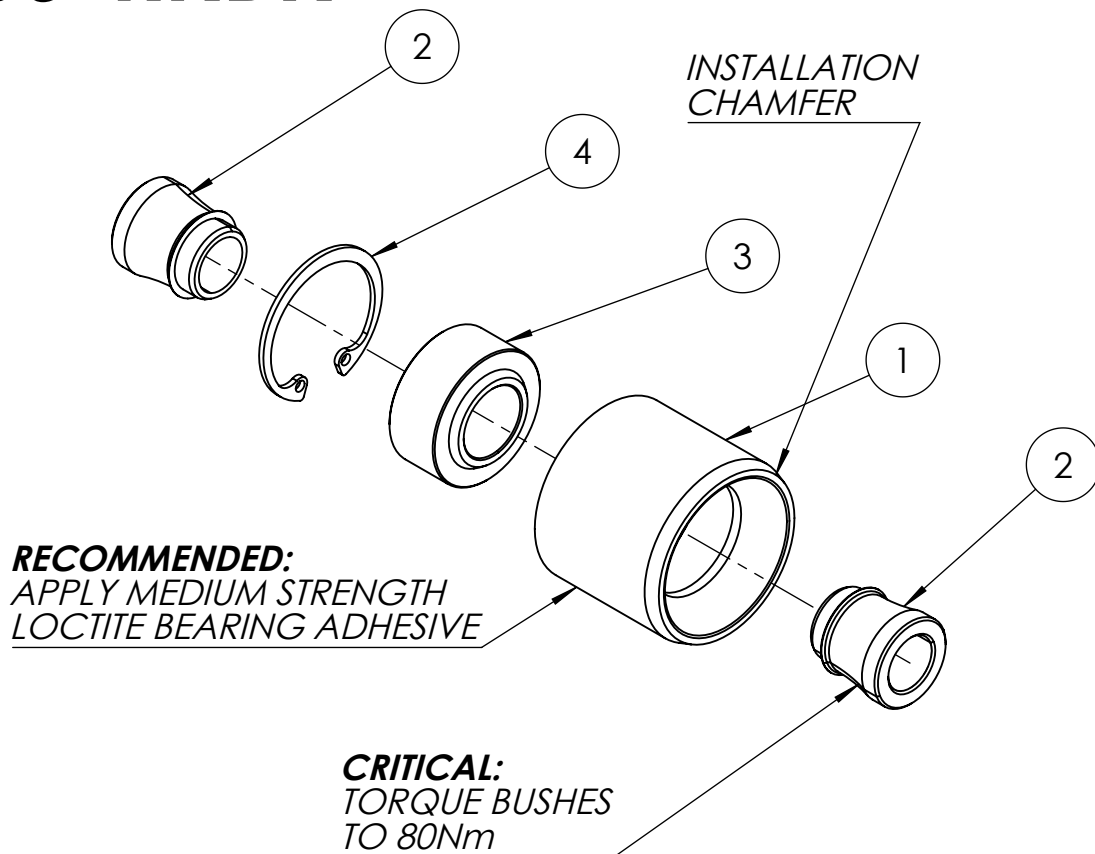


DIAGRAM A

1. PRESS OUT THE OEM TRACTION ARM BUSHINGS.
2. APPLY LOCTITE BEARING ADHESIVE.
(MEDIUM STRENGTH IS SUFFICIENT) *RECOMMENDED.
3. PRESS IN NEW SPHERICAL BEARINGS USING THE INSTALLATION CHAMFER. PRESS THE HOUSING IN BY APPLYING FORCE ON THE OUTER EDGE.

ITEM NO.	DESCRIPTION:	QTY:
1	GT86 REAR KNUCKLE TRACTION ARM COM10T HOUSING	1
2	HIGH MISALIGNMENT SPACER M12X15.8X48	2
3	COM10-T SPHERICAL BEARING	1
4	DIN 472 INTERNAL RETAINING RING	1