


PRES-SWRL

INSTALL GUIDE IS SPECIFIC TO Z34 CHASSIS VEHICLES THAT ARE EQUIPED WITH PRESSURED OVERFLOW BOTTLES ONLY!!!

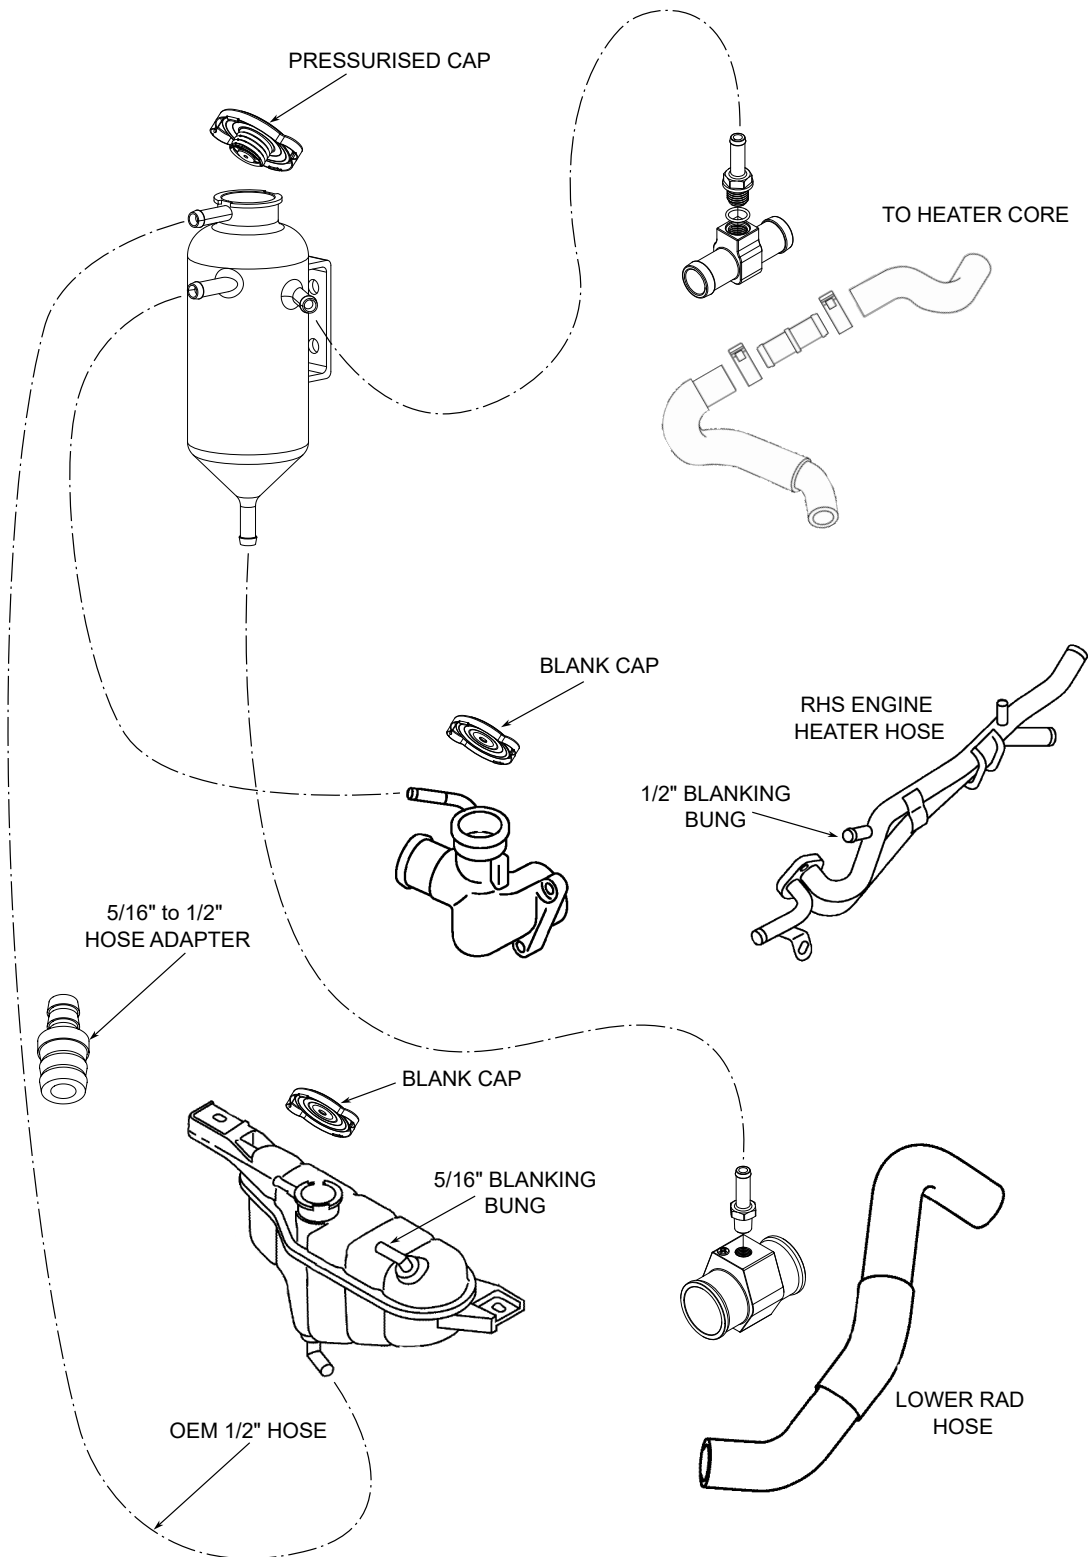

5	1	5/16" to 1/2" HOSE ADAPTER
4	2	13-19mm CLAMPS
3	2	16-25mm CLAMPS
2	1	1/2" BLANKING BUNG
1	1	5/16" BLANKING BUNG
Item	Qty	Part Name
Parts List		