

Z34 (Steel) SECONDARY BUSH GUIDE


Cutout and place overtop of
the OEM diff bush housing

Cutout and lineup these two holes
on the inside of the subframe

Mark and drill pilot hole here
Refer to bolt in or weld in bush assembly
guids for correct final hole sizes

****For GK rear diff covers ONLY****

Cutout and lineup this hole on
the outside of the subframe

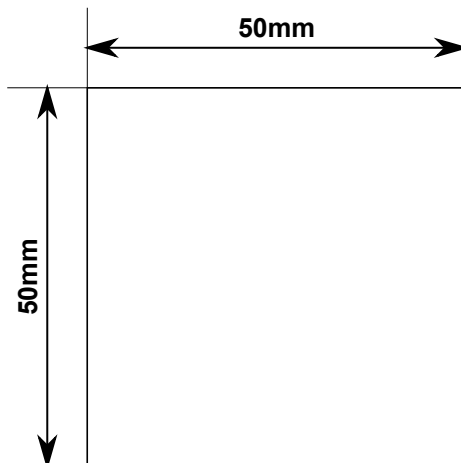

Paper Size = A4

This guide is for Letter sized paper, A4 size can be found on product page

Print at 100% scale
Confirm dimensions using calibration square
Adjust printing scale if required

