R32X-LEVR & R33X-LEVR

CRITICAL!

INSTALLATION ORDER

1. TEST FIT SWAYBAR IN CAR & FIND OPTIMAL POSITION FOR ENGINE & GROUND CLEARANCE
2. INSTALL BUSHES TO SWAYBAR
3. INSTALL LEVERS TO SWAYBAR
4. INSTALL ASSEMBLY INTO CAR

CRITICAL!

SWAYBAR LEVER MUST SIT INSIDE CASTER ROD BRACKET

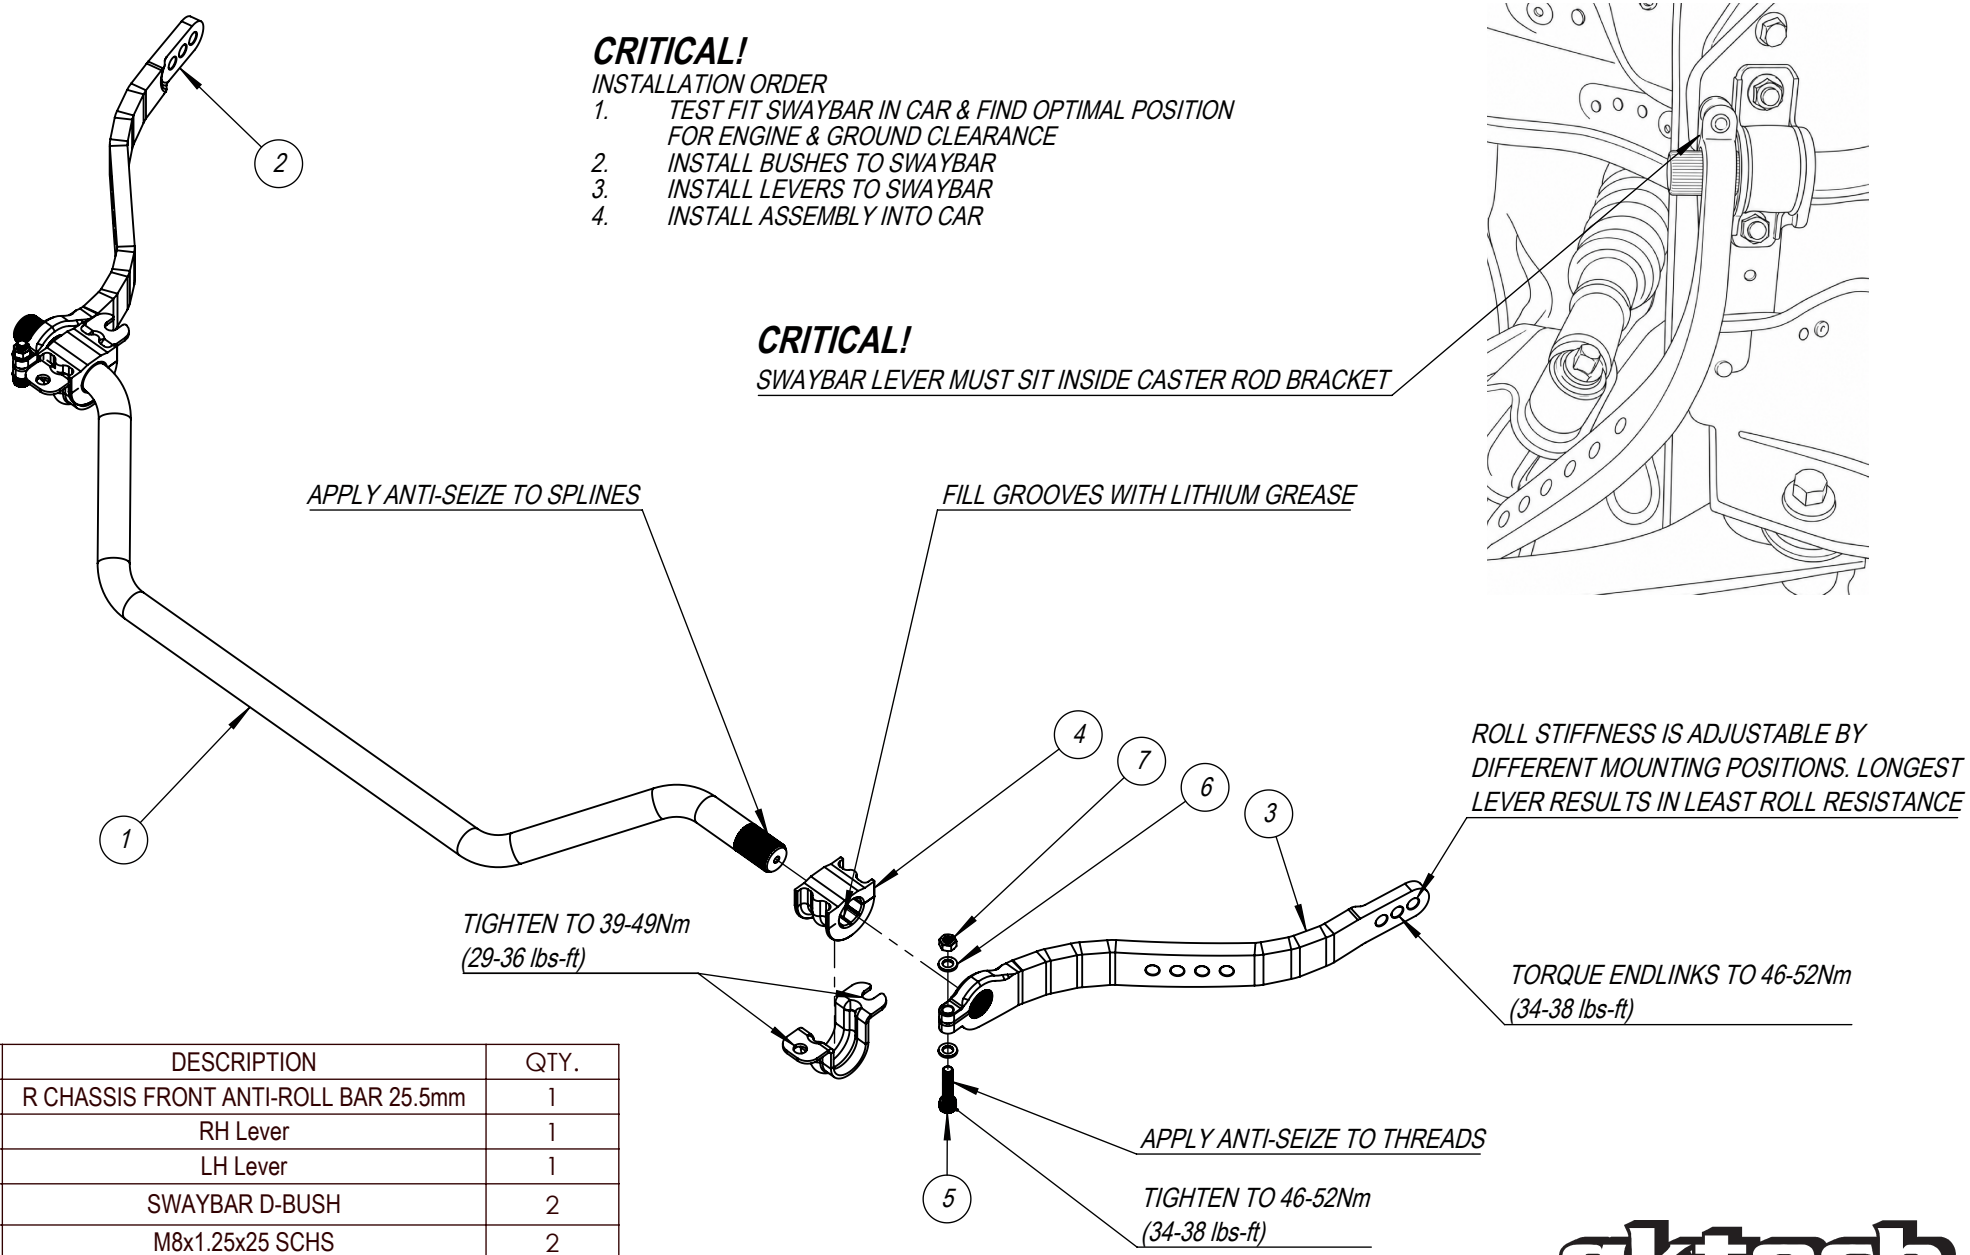

ITEM NO.	DESCRIPTION	QTY.
1	R CHASSIS FRONT ANTI-ROLL BAR 25.5mm	1
2	RH Lever	1
3	LH Lever	1
4	SWAYBAR D-BUSH	2
5	M8x1.25x25 SCHS	2
6	M8x15x2.0 Washer	4
7	M8x1.25 Locknut	2

gktech.com